

# Server installation

The following chapter will give you an overview on how to install and maintain your RECS®|Box. When working on the RECS®|Box always wear **ESD protection** equipment.

## Compute module installation

When changing a module shut down all modules on the respective carrier and turn the power for the modules off in the management GUI. The rest of the system can stay powered.

### SMARC module

### Nvidia Jetson module

## M.2 card installation

## Fan replacement

A fan that has damaged blades should be **replaced immediately**, because the bearing will break very fast due to the imbalance and resulting vibrations.

When changing a fan on a working system watch out that the system is not overheating during the changing process.

From:  
<https://recswiki.christmann.info/wiki/> - RECS®|Box Wiki

Permanent link:  
[https://recswiki.christmann.info/wiki/doku.php?id=doc\\_urecs:server\\_installation&rev=1643802817](https://recswiki.christmann.info/wiki/doku.php?id=doc_urecs:server_installation&rev=1643802817)

Last update: **2022/02/02 11:53**

