

# Server installation

The following chapter will give you an overview on how to install and maintain your u.RECS®. When working on the u.RECS® always wear **ESD protection** equipment.

## Compute module installation

When changing a module shut down all modules on the respective carrier and turn the power for the modules off in the management GUI. The rest of the system can stay powered.

### SMARC module

Before installing a SMARC module, check that the module's own heatspreader is correctly mounted and fastened. Depending on the module, the heat spreader can be fastened with the same screws as the SMARC module itself or with its own screws or clips.

Switch off the u.RECS. Ensure that the SMARC module is correctly aligned: the notch on the contact side of the SMARC module must match the notch in the u.RECS connector. Now carefully insert the module at an upward angle of  $\sim 20^\circ$ . Gently press the SMARC module down until it is parallel to the u.RECS and start tightening the four screws of the SMARC module. Start with the two screws on the opposite side of the connector.

Now connect your peripheral, start the module and enjoy the show



### Nvidia Jetson Xavier NX module

## M.2 card installation

## Fan replacement

A fan that has damaged blades or any other kind of damage should be **replaced immediately**. Fans can only be changed opening the u.RECS chassis. Please power down the whole system and disconnect power to not risk any damage due to shortcuts etc.

From:  
<https://recswiki.christmann.info/wiki/> - RECS® | Box Wiki

Permanent link:  
[https://recswiki.christmann.info/wiki/doku.php?id=doc\\_urecs:server\\_installation&rev=1727792900](https://recswiki.christmann.info/wiki/doku.php?id=doc_urecs:server_installation&rev=1727792900)

Last update: **2024/10/01 14:28**

