

# Fan replacement

A fan that has damaged blades should be **replaced immediately**, because the bearing will break very fast due to the imbalance and resulting vibrations.

When changing a fan on a working system be very carefull not to touch the blades or get any cables into the fans. Also watch out that the system is not overheating during the changing process.

Open the case according to the [Opening/closing the case](#) chapter of this wiki. First disconnect the fan from its power source and make sure the cable is not stuck anywhere.

## Antares

To remove the fan simply drag it out of the mounting plate diagonally. Unscrew the anti-vibration-rubber from the broken fan, and screw it diagonally onto the new fan so that the cable and airflow point in the right direction when installed.

## Arneb

From:

<https://recswiki.christmann.info/wiki/> - RECS®|Box Wiki

Permanent link:

[https://recswiki.christmann.info/wiki/doku.php?id=documentation:fan\\_replacement&rev=1415193126](https://recswiki.christmann.info/wiki/doku.php?id=documentation:fan_replacement&rev=1415193126)

Last update: **2014/11/05 13:12**

