

# Opening/closing the case

To open the case first make sure, that **no heavy load** is on the modules. Because this can lead to an overheating when the top cover is removed.

## Antares

### Opening the case

First unscrew the M3 knurled screw at the top back of the Antares.  
Then slide the cover back and carefully lift the cover so that the hooks don't get stuck and bend.

### Closing the case

Place the cover onto the Antares so that the hooks fit into the holes in the chassis.  
Then slide the cover to the front while pushing the hooks downwards into the holes if they are stuck.  
At last tighten the M3 knurled screw at the top back of the Antares.

## Arneb

### Opening the case

### Closing the case

From:  
<https://recswiki.christmann.info/wiki/> - RECS®|Box Wiki

Permanent link:  
[https://recswiki.christmann.info/wiki/doku.php?id=documentation:opening\\_closing\\_the\\_case&rev=1415010311](https://recswiki.christmann.info/wiki/doku.php?id=documentation:opening_closing_the_case&rev=1415010311)

Last update: **2014/11/03 10:25**

