

# User Manual

1. Introduction
  1. Chassis
  2. Compute Modules
  3. Safety instructions
2. Server installation
  1. Rack mounting
  2. Opening/closing the case
  3. Baseboard replacement
  4. Compute module installation
  5. Netboard installation
  6. Extension card installation
  7. Fan replacement
3. Physical interface
  1. RCU interface
    1. Front panel connectors
    2. Control panel
    3. Power connectors
  2. RPU interface
    1. Front panel connectors
    2. LCD display
    3. Power connectors
  3. Sensors
4. Software interface
  1. Management WebGUI
    1. Management
    2. Global settings
    3. Log viewer
  2. REST API
  3. Nagios API
5. RECSDaemon
6. PXE Server
  1. Server side
    1. Setting up dnsmasq
    2. Setting up nfs-kernel-server
  2. Client side
    1. Christmann Apalis Exynos
    2. Toradex Apalis T30
7. Glossary

From:  
<https://recswiki.christmann.info/wiki/> - RECS®|Box Wiki

Permanent link:  
[https://recswiki.christmann.info/wiki/doku.php?id=documentation:user\\_manual](https://recswiki.christmann.info/wiki/doku.php?id=documentation:user_manual)

Last update: **2020/03/04 13:30**

