# **Opening/closing the case**

To open the case first make sure, that **no heavy load** is on the modules. Because this can lead to overheating when the top cover is removed.

### Antares

#### **Opening the case**

First unscrew the M3 knurled screw (A) at the top back of the Antares. Then slide the cover back (B) and carefully lift the cover so that the hooks don't get stuck and bend.

#### **Closing the case**

Place the cover onto the Antares so that the hooks fit into the holes in the chassis. Then slide the cover to the front (B) while pushing the hooks downwards into the holes if they are stuck.

At last tighten the M3 knurled screw (A) at the top back of the Antares.

e t		₹B	t		t
(H)	0	o	0	•	
A	-	0			Front
Fig. 1					

## Arneb

#### **Opening the case**

Unscrew the 14 (six on top, eight on the sides; marked red below) M3 screws using a T8 Torx screwdriver and lift the cover.

#### **Closing the case**

Place the cover on top of the Arneb and check if the screwholes of the cover align with the ones in the chassis.

If this is not the case the cover is placed in the wrong direction. Tighten all 14 screws (marked red below) using a T8 Torx screwdriver.

1/2

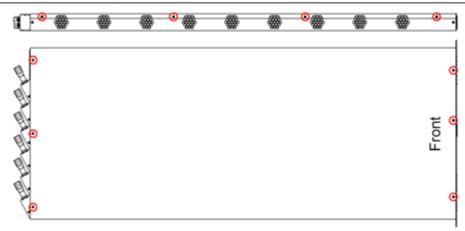


Fig. 2: Cover screws (red circle); the four screws on the right side are not shown

From: https://recswiki.christmann.info/wiki/ - RECS<sup>®</sup>|Box Wiki
Permanent link: https://recswiki.christmann.info/wiki/doku.php?id=documentation:opening\_closing\_the\_case&rev=1415023678

